


INSTALLATION INSTRUCTIONS  
**U200FR**  
2000-2007 REAR SKID PLATE



Read all instructions before beginning installation!

1. Remove the two OEM stud bolts and nuts on each side of the fuel vapor separator shown in photos 1 and 3.

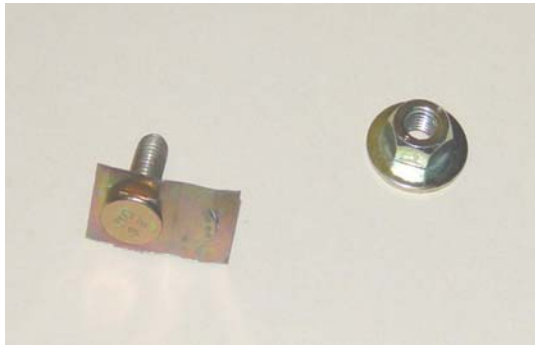


**Photo 1**



**Photo 2**

2. Remove the two OEM black screws and washers shown in photos 2 and 3.

OEM Black  
Screw and  
Washer

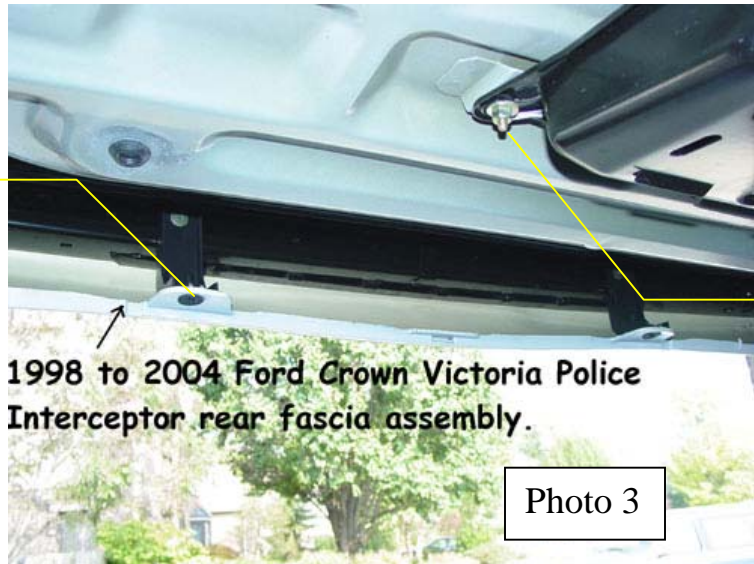


OEM Stud  
Bolt and Nut

3. Reattach the fuel vapor separator using the supplied carriage bolt and black retaining washer shown in photo 4. Insert the carriage bolt into the slot and thread up the black retaining washer to secure it.



**Photo 4**

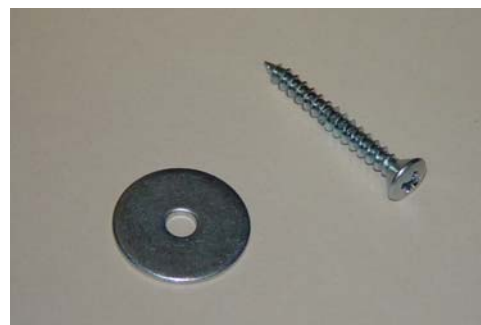

**Photo 5**

4. Attach the U200FR rear skid plate with the rough side facing down as shown in photo 6.
5. Fasten the skid plate on each side of the fuel vapor separator using the two supplied flange nuts shown in photos 4 and 6. The flange nuts thread onto the carriage bolts used to reattach the fuel vapor separator.

1 ½” Screw  
and Washer



Carriage  
Bolt and  
Flange Nut

Pro-Gard U201FR Crown Victoria Rear Skidplate  
fits 1998 to 2004 models, No-Holes Drilled & No-Trim Cut

Photo 6

6. Fasten the skid plate to the bumper using the two supplied 1 ½” screws and washers shown in photos 5 and 6.

[IF THERE ARE ANY QUESTIONS OR CONCERNS PLEASE CONTACT:](#)

PRO-GARD PRODUCTS, LLC  
Phone: 317-579-6680  
Fax: 317-579-6681